



# Contents

Getting Started	04
What's Included	05
HomeDock for Zune Remote Control	06
Setting Up HomeDock for Zune	07
Tips + Troubleshooting	11
Tech Specs	13
Service + Support	14
Warranty	15
FCC Statement	16
Safety Instructions	17

© 2007 Digital Lifestyle Outfitters

HomeDock, Digital Lifestyle Outfitters and

The DLO logo are trademarks of Digital Lifestyle Outfitters.

Zune and the Zune logo are trademarks or registered trademarks  
of Microsoft Corporation in the United States and/or other countries.

All Rights Reserved

Printed in Taiwan

M54009-061221A

# Getting Started

Congratulations on your purchase of the DLO HomeDock for Zune with On-TV Navigation, the dock that lets you enjoy your Zune's music, video, photos, radio and community in your living room. Connecting HomeDock to your home entertainment center is a snap. We'll get you started in four easy steps.

## Step 1 - Assemble your HomeDock

Attach the HomeDock Support Stand and make the proper power, audio and video connections to your Home Entertainment Center. [See page 6.](#)

## Step 2 - Connect your Zune


Then, adjust the HomeDock Support Stand ([see page 8](#)) and press the **Power Button** on your HomeDock Remote Control.


## Step 3 - For On-TV Navigation of your Zune you'll have to set the **tv out** setting on the Zune itself.

To do this, simply go to **settings** on the Zune's Main Menu (you may do this manually using the Zune's Control Pad or with the HomeDock's Remote Control). Under **set-tings** select **display** and then select **tv out: off**. When you see a pop-up window, just hit the **Enter/OK Button** on your HomeDock Remote or on the Zune Control Pad. Your Zune's interface should now appear on your television screen.

## Step 4 - Now you can navigate and select music, video, radio or community using your HomeDock Remote control.


# What's Included

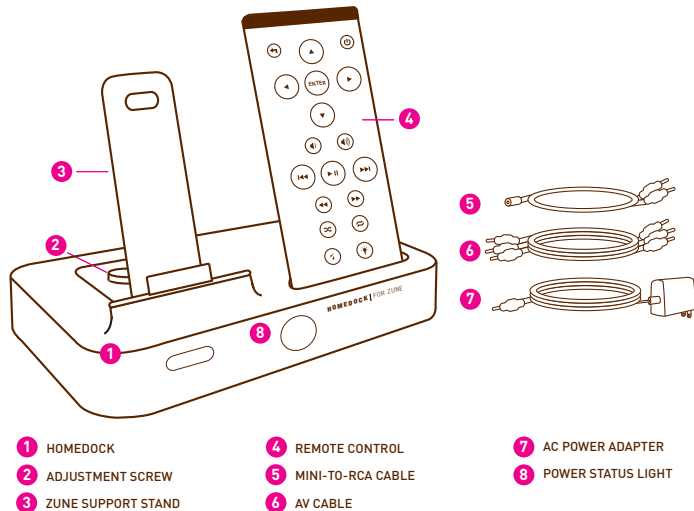

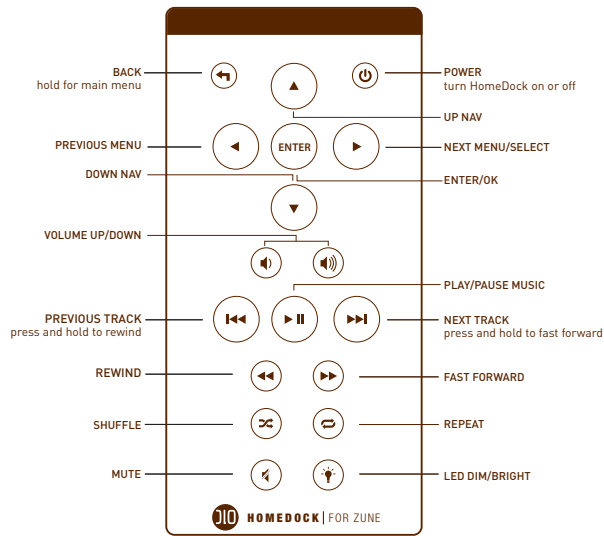


## Assembling your DLO HomeDock

1. Remove the adjustment screw on top of the HomeDock.
2. Fit the Support Stand into the cavity on top of the HomeDock.  
**NOTE:** Be sure to line up the Support Stand's cutout slot with the adjustment screw on the Dock.
3. Tighten the Support Stand's adjustment screw to secure the Stand in place. Do not over-tighten the screw.

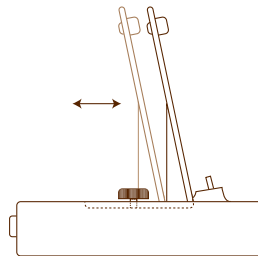

## Connecting HomeDock for Zune

There are several ways you can connect HomeDock to your existing Home Entertainment Center. Generally, we recommend you connect the Left and Right Audio Out to your stereo directly, and Video Out directly to your TV. HomeDock works great connected solely to your home stereo, although you wouldn't be able to use On-TV Navigation. If you want to use your HomeDock to select and view music, videos, pictures, radio or community from your Zune, you need to hook it up to your TV.

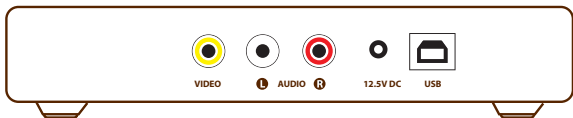

### Basic Connection of HomeDock to your home stereo and/or TV

1. Plug the included AC power adapter into the back of your HomeDock, and the other end into any available AC power outlet.
2. Plug the included A/V Cable into the back of the HomeDock's base. Be sure to match the color on the A/V plugs (red, white and yellow) with the corresponding jack color on the base.
3. Plug the other end of the A/V Cable into the corresponding jacks of any available input on your home stereo receiver and/or TV. White plug-Left audio, Red plug-Right audio and Yellow plug-Video.
4. Using your HomeDock Remote Control turn on your HomeDock. Also turn on your home stereo and/or TV and select the correct input for the HomeDock.

### Using HomeDock with powered speakers

1. Plug the included AC power adapter into the back of the HomeDock base, then into any available AC power outlet.

2. Connect the included RCA-to-mini Audio Adapter to the Left and Right Outputs on the back of your HomeDock.
3. Using a mini-to-mini cable (included with most powered speakers), connect your HomeDock to the Input on the powered speakers.
4. Using your HomeDock Remote Control turn on your HomeDock. Also turn on your powered speakers.

### Adjusting HomeDock to Fit Your Zune

The HomeDock can be used with many Zune cases left on. The first time you use your Zune, you should adjust the HomeDock's Support Stand.

Follow these steps to do so:

1. Loosen the Support Stand Screw and slide the Support Stand as far back as it can go.
2. Connect your Zune by carefully lowering it onto the Zune dock connector of the HomeDock. Be careful not to damage the Zune connector on the HomeDock or on the Zune.
3. Slide the Support Stand toward the Zune until the Zune is gently resting against the Support Stand Pad. The back of the Zune should be parallel with the Support Stand and not leaning more forward or backward.
4. Tighten the Support Stand Screw to keep it in place.

## Connecting HomeDock to your PC for use as a Desktop Dock

1. Use any standard USB 2.0 compatible A-to-B cable (not included) to connect the HomeDock to your Windows-based home computer.
2. Once connected, the Zune software on your PC will recognize your Zune player and update the content on the player. For more information, see the instructions that came with your Zune.

**NOTE:** Your HomeDock will also charge your Zune while connected to your computer.

I've selected a video or pictures to play on my TV but instead it's only playing on my Zune's screen.

For On-TV Navigation of your Zune you'll have to set the **tv out** setting on the Zune itself. To do this, simply go to **settings** on the Zune's Main Menu (you may do this using the Zune's Control Pad or with the HomeDock's Remote Control). Under **settings** select **display** and then select **tv out: off**. When you see a pop-up window, just hit the **Enter/OK Button** on your HomeDock's Remote or on the Zune Control Pad. Your Zune's interface should now appear on your television screen.

I am unable to get reception using my Zune's radio mode, what's wrong?

The Zune actually uses your headphones or ear buds as an antenna. So, in order to get proper reception in radio mode using the HomeDock for Zune, you'll need to plug in a pair of headphones or ear buds.

My HomeDock for Zune sounds a little distorted.

The balance of volume between your HomeDock and Stereo/TV can affect the audio quality significantly. Adjust the HomeDock's volume or your Home Stereo/TV volume up or down to achieve the best sound quality.

Does the HomeDock charge my Zune's battery?

Yes. The HomeDock charges and powers your Zune whenever your Zune is connected.

## Do I have to use a TV with the HomeDock?

No. The only time you need a TV is for On-TV viewing and navigation of your music, videos, pictures, radio or community. For all other uses, the HomeDock is a music-based, remote-controlled home docking system for your Zune that requires nothing but a stereo or powered speakers to play your Zune's music. Of course, to get the most out of your HomeDock, you should connect it to a TV and Home Stereo. Remember, in order to use On-TV Navigation to select and choose your music, videos, pictures, radio or community, you have to connect your HomeDock to your TV.

## INPUTS/OUTPUTS

**Left/Right Audio:** analog audio output, White plug-Left, Red plug-Right

**Video:** composite video output, Yellow plug

**Power Adapter Input:** 100-240VAC, 47-63 Hz

**Power Adapter Output:** 10VDC, 1.5 amps max

**USB-A:** standard universal serial bus, USB 2.0

## REMOTE CONTROL

**Battery:** 3V, type CR2032 or equivalent

For more information, updates and tips, please visit our website at [www.dlo.com](http://www.dlo.com) and click [Support](#).

## Digital Lifestyle Outfitters Limited Manufacturer's Warranty

**What This Warranty Covers.** DLO (Digital Lifestyle Outfitters) warrants this product against defects in materials and workmanship. This limited warranty applies only to products manufactured by or for DLO.

**What This Warranty Does Not Cover.** This warranty does not apply to damage caused by: (a) accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions, or products not manufactured by or for DLO; and (b) aftermarket services (including upgrades and expansions).

**How Long This Warranty Lasts.** This warranty lasts for a period of ninety (90) days from the date of original retail purchase.

**What DLO Will Do.** If a defect exists, DLO will exchange the product, at its option, with a product that is new or has been manufactured from new or serviceable used parts and that is at least functionally equivalent to the original product. DLO will warrant a replacement product against defects in materials and workmanship for a period of ninety (90) days from the date of replacement.

**How To Get Service.** In order to be eligible for this warranty, you **MUST** register your purchase at [www.dlo.com/register](http://www.dlo.com/register) within thirty (30) days of purchasing this product. If you believe that this product is defective in materials or workmanship, please e-mail [customerservice@dlo.com](mailto:customerservice@dlo.com) with a brief description of the problem, for further instructions.

**No Change To Warranty.** No DLO reseller, agent or employee is authorized to make any modification, extension, or addition to this warranty.

**How State Law Applies.** This warranty gives you specific legal rights, and you also may have other rights that vary from state to state, or country.

**Restrictions On Implied Warranties.** All implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Restrictions On Damages.** DLO is not responsible for direct, special, incidental or consequential damages resulting from any breach of warranty or condition or under any other legal theory (including, without limitation, lost profits; downtime; goodwill; damage to or replacement of equipment and property; failure to maintain the confidentiality of data stored on the product; and any costs of recovering, reprogramming or reproducing any program or data stored in or used with products manufactured by or for DLO). Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



W1000-050803-B



## Federal Communications Commission Interference Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<b>IMPORTANT</b>  <small>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</small>	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>  <small>CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</small>	 <small>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</small>
---	--	--

## IMPORTANT SAFETY INSTRUCTIONS READ BEFORE OPERATING EQUIPMENT

1. Please be sure to read these instructions.
2. Please heed all warnings.
3. Do not use this apparatus near water.
4. Clean only with dry cloth.
5. Install in accordance with the manual's instructions.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Protect the power cord from being pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments, accessories or cables specified by the manufacturer.
9. Refer all servicing to DLO customer service personnel.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on or near this device.

Thanks for buying the  
HomeDock for Zune.  
Where your Zune lives - at home.

